

How do I enable the extra camera inputs on my DVR?

Applies to: Vi-Series, M-series DVRs

If you have one of our Vi-Series DVR's and you have noticed there are additional unused camera inputs it is possible to upgrade the DVR so all inputs can be used.

Vi-series DVR:

you can purchase an upgrade code from Videoswitch and follow the instruction below. When you purchase the upgrade, you must let us know the serial number of the DVR. The upgrade will only work for that DVR.

- ◆ Ensure Vi-Series DVR is powered up.
- ◆ Eject the CD draw and place an upgrade CD into the DVR.
- ◆ After a few seconds, a blue screen will appear asking to enter the upgrade code.
- ◆ Enter the following code: XXXXXXXXXXXX as stated on the supplied upgrade CD.
- ◆ Now press the OK button.
- ◆ The Vi-Series DVR will start to upgrade. This may take a few minutes.
- ◆ When the upgrade has finished, the unit will reboot itself and the blue upgrade screen will reappear. When this happens, eject the CD from the Vi-Series DVR and live images will appear. To check if the Vi-Series DVR has been upgraded successfully, press the info button and check if the DVR model has been upgraded to what you expected.

M-series DVR:

An additional 4-camera channel card must be fitted to upgrade an M-series DVR. This can be done by a competent engineer, or the DVR can be returned to Videoswitch for the upgrade. Contact Videoswitch for details.

Camera upgrade options

<u>Model</u>	<u>Starting cameras</u>	<u>Upgrade to</u>
VDC:	4	9
Vi101,Vi-102,Vi-200,Vi-205	4,6	10
Vi305,Vi405	12	16