

How do I burn to CD/DVD on a Vi-series DVR

Applies to: Vi101, Vi102, Vi200, Vi400, Vi-600, Vi205, Vi-305, Vi-405, Vi605

Extract from user manual:

6 BURN

To burn a section of video recording to CD you must go to the middle the video that you wish to backup, using the FIND and PLAY facilities as described in sections 4 and 5. Then do the following:

6.1 BURN-1 Edit Incident

Call up the **BURN-1** screen by pressing this key.



If there is a CD in the CD drive that is *not* blank, the BURN screen will not be displayed.

Create an "incident" by pressing this key.



Change the duration of the incident as required using the left/right keys:



The start and end times can also be individually adjusted by using the **UP** and **DOWN** arrow keys to highlight the start or end times, and the **LEFT** and **RIGHT** keys to adjust the time.

Alternatively if you highlight the start time and press **TAG** it will be set to the current play image. Similarly if you highlight the end time and press **TAG** it will be set to the current play image.

Press the "Open CD drawer" button on the CD drive and place a *new* CD-R in the CD drive. Press the "Open CD drawer" button again to close the drawer.

Start writing to CD by pressing this key:



Note that you can only write incidents to a *blank* CD. **When an important incident has been written to a CD, always check that the CD plays back correctly**, either by playing it on the VIX05 or on a PC.