

Issues with IP video server connected to CMOR dome

Applies to: CMOR Dome, Axis IP server

- ♦If the images exhibit flickering, it may be that the server is not quite sensitive enough.
- ♦Turn up the video gain in the CMOR dome and the flickering should cease.